TECHNICAL MANUAL

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SEMITRAILER, VAN: ELECTRONIC, 6-TON, 2-WHEEL

M348A2	(2330-00-678-3838)	M373A2	(2330-00-705-8932)
M348A2C	(2330-00-690-7724)	M373A2C	(2330-00-672-7496)
M348A2D	(2330-00-690-7725)	M373A2D	(2330-00-738-5869)
M348A2F	(2330-00-690-7726)	M373A3	(2330-00-937-4518)
M348A2G	(2339-00-797-7405)	M373A4	(2339-00-937-4519)
M348A2H	(2330-00-973-1262)	M373A5	(2330-00-781-7755)
M348A2K	(2330-00-740-2322)	XM1005	(2330-01-107-5728)
M348A2N	(2330-00-740-2329)	XM1007	(2330-01-109-5961)

This manual and TM 9-2330-246-14 supersedes TM 9-2330-246-14&P, dated 6 June 1983.

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY AUGUST 1991

TECHNICAL MANUAL

TM9-2330-246-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D. C., 28 AUGUST 1991

UNIT, DIRECT SUPPORT, GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SEMITRAILER, VAN: ELECTRONIC, 6-TON, 2-WHEEL

M348A2	(2330-00-678-3838)	M373A2	(2330-00-705-8932)
M348A2C	(2330-00-690-7724)	M373A2C	(2330-00-672-7496)
M348A2D	(2330-00-690-7725)	M373A2D	(2330-00-738-5869)
M348A2F	(2330-00-690-7726)	M373A3	(2330-00-937-4518)
M348A2G	(2339-00-797-7405)	M373A4	(2339-00-937-4519)
M348A2H	(2330-00-973-1262)	M373A5	(2330-00-781-7755)
M348A2K	(2330-00-740-2322)	XM1005	(2330-01-107-5728)
M348A2N	(2330-00-740-2329)	XM1007	(2330-01-109-5961)

Current as of 28 February 1991

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 *(Recommended Changes to Publications and Blank Forms),* or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution unlimited.

TABLE OF CONTENTS

			Page	Illus Fig
SECTION 1.	INTRODUCTION		1	
SECTION 11.	REPAIR PARTS LIST		1-1	
GROUP 06	ELECTRICAL SYSTEM			
	0608-	MISCELLANEOUS ITEMS	1-1	
		ELECTRICAL SYSTEM COMPONENTS, 24-VOLT	1-1	1
		ELECTRICAL SYSTEM COMPONENTS, 110-VOLT, M373A3, M373A4 AND M373A5	2-1	2
		TELEPHONE INSTALLATION, M373A3 AND M373A4	3-1	3
		Telephone INSTALLATION. M373A5	4-1	4
		ELECTRICAL SYSTEM COMPONENTS, 110-VOLT, M348A2H	5-1	5
		POWER ENTRY PANEL, M348A2H	6-1	6

* This manual and TM 9-2330-246-14 supersedes TM 9-2330-246-14&P dated 6 June 1983

*U.S. GOVERNMENT PRINTING OFFICE: 1992 643-025/70030

CHANGE 1

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	1503- PINTLES AND TOWING ATTACHMENTS	34-1	
	PINTLE AND TOWING ATTACHMENTS	34-1	34
	1504- SPARE WHEEL CARRIER AND TIRE LOCK	35-1	
	SPARE WHEEL CARRIER	35-1	35
	1506- FIFTH WHEEL	36-1	
	RESILIENT KINGPIN, XM1007. ..	36-1	36
	1507- LANDING GEAR, LEVELING JACKS	37-1	
	LEVELING JACK, ALL MODELS EXCEPT XM1005 AND XM1007	37-1	37
	LEVELING JACK, XM1005 AND XM1007	38-1	38
	LANDING GEAR, EARLY MODEL	39-1	39
	LANDING GEAR, LATE MODEL	40-1	40
GROUP 16	SPRINGS AND SHOCK ABSORBERS		
	1601 - SPRINGS	41-1	
	SPRINGS AND RADIUS RODS	41-1	41
GROUP 18	BODY, CAB, HOOD, AND HULL		
	1801 - BODY, CAB, HOOD, AND HULL ASSEMBLIES	42-1	
	FRONT, LEFT REAR, LEFT SIDE, RIGHT REAR, AND RIGHT SIDE DOORS AND DOOR LOCKS, ALL MODELS EXCEPT M348A2C, M373A2D, XM1005 AND XM1007	42-1	42
	FRONT, RIGHT REAR, SWINGING, AND VAN BODY DOORS, DOOR LOCKS AND RELATED PARTS, ALL MODELS EXCEPT M348A2K, M348A2N, M373A2D, XM1005, AND XM1007	43-1	43
	FRONT DOOR, M373A2D	44-1	44
	RIGHT REAR AND RIGHT SIDE DOORS AND LEFT REAR DOOR, M373A2D	45-1	45
	SIDE DOOR, ALL MODELS EXCEPT M348A2H, M348A2K, M348A2N, M348A2D,XM1005 AND XM1007	46-1	46
	FRONT DOORS, M348A2K AND M348A2N	47-1	47
	REAR DOOR, M348A2K AND M348A2N	48-1	48
	REAR DOORS, XM1005 AND XM1007	49-1	49
	REAR DOOR LOCK ASSEMBLY, XM1005 AND XM1007	50-1	50
	RIGHT SIDE DOOR, M373A2 0NLY	51-1	51
	DOOR HOLDER, DOOR BUMPER, SPLASH GUARD AND REMOVABLE DOOR POST	52-1	52
	1812- SPECIAL PURPOSE BODIES	53-1	
	POWER ENTRY PANEL AND FORDING PLATE, M348A2H	53-1	53
	FRAME AND COVER ASSEMBLY AND AIR INTAKE ASSEMBLY, M348A2D	54-1	54
	ENTRANCE PANELS AND LOUVERS, M348A2C, M348A2D AND M348A2F	55-1	55
	AIR VENT FRAME ASSEMBLY, M373A2D AND TERMINAL ENTRANCE ASSEMBLY, M348A2F	56-1	56
	FAN VENT ASSEMBLY, SIGNALAND POWER ENTRY BOX ASSEMBLIES, M348A2K AND M348A2N	57-1	57
	INTAKE AND EXHAUST VENT ASSEMBLIES, M348A2K	58-1	58
	AIR INTAKE ASSEMBLIES, M373A2C	59-1	59
	AIR VENT FRAME AND SHIELD ASSEMBLIES, M373A3, M373A4 AND M373A5	60-1	60
GROUP 22	BODY, CHASSIS, AND HULL ACCESSORY ITEMS		
	2202 - ACCESSORY ITEMS	61-1	
	REFLECTOR AND LEVEL	61-1	61

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	2210- DATA PLATES AND INSTRUCTION HOLDERS	62-1	
	NAME AND DATA PLATES	62-1	62
	NAME AND DATA PLATES	63-1	63
	DATA PLATES AND INSTRUCTION PLATES	64-1	64
GROUP 52	REFRIGERATION, AIR CONDITIONER/HEATER, AND AIR CONDITIONING COMPONENTS		
	5200- AIR CONDITIONER/HEATER ASSEMBLY AND GAS COMPRESSOR ASSEMBLY	65-1	
	AIR CONDITIONER, M348A2H	65-1	65
	AIR CONDITIONER, M373A2D, ...	66-1	66
	AIR CONDITIONER, M373A3, M373A4 AND M373A5	67-1	67
GROUP 60	STEAM BOILERS, WATER HEATERS, HEATING UNITS, BURNERS		
	6004 - FUEL SYSTEM	68-1	
	HEATER FUEL LINES, M373A2D.....	68-1	68
	HEATER FUEL LINES, M373A5	69-1	69
	6007 - FUEL TANK.	70-1	
	FUEL TANK INSTALLATION, M373A2D AND M373A5	70-1	70
	6010 - EXHAUST SYSTEM	71-1	
	HEATER EXHAUST PIPE, M373A2D AND M373A5	71-1	71
	6014 - UNIT HEATER	72-1	
	HEATER INSTALLATION, M373A2D AND M373A5	72-1	72
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501 - BULK MATERIEL	BULK-I	
	BULK MATERIEL	BULK-1	BULK
SECTION III.	SPECIAL TOOLS LIST (NOT APPLICABLE)		
SECTION IV.	CROSS REFERENCE INDEXES		
	NATIONAL STOCK NUMBER INDEX	I-1	
	PART NUMBER INDEX.....	I-19	
	FIGURE AND ITEM NUMBER INDEX	I-62	

UNIT MAINTENANCE, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit Maintenance, Direct Support and General Support Maintenance of the Semitrailer, Van. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sect ions:

a. *Section II.* Repair Parts list. *A* list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section ///. Special Too/s List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. *Section IV. Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing; in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM /VO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

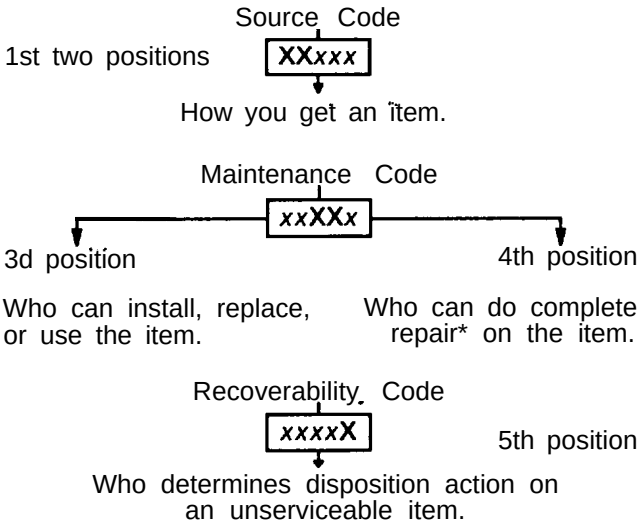

* *Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: