UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

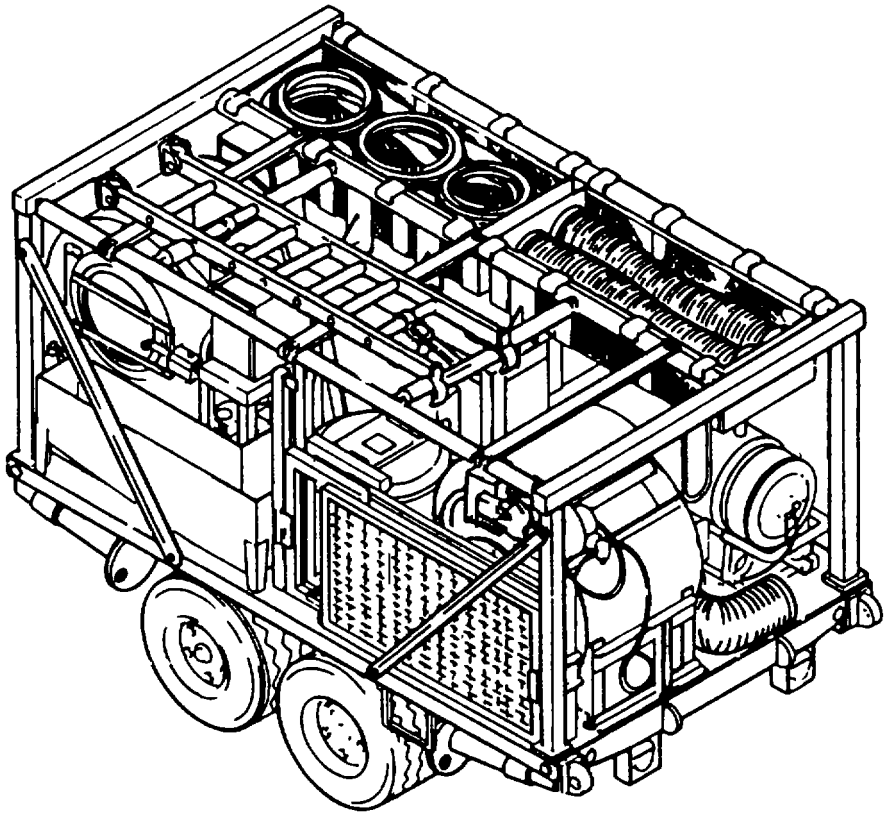

LAUNDRY UNIT, TRAILER MOUNTED
MODEL M85-100
NSN 3510-01-291-8169

Approved for public release; distribution is unlimited

HEADQUARTERS, DEPARTMENT OF THE ARMY
13 MARCH 1991

TECHNICAL MANUAL

NO. 10-3510-220-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON D.C., 13 MARCH 1991

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST FOR LAUNDRY UNIT, TRAILER MOUNTED MODEL M85-100 NSN 3510-01-291-8169

Current as of 6 March 1991

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <daf2028@st-louis-emh7.army.mll>. A reply will be furnished directly to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus/ Figure
Section I.	INTRODUCTION	1	
Section II.	REPAIR PARTS LIST	1-1	
Group 01	Cover Assembly, Tarp	1-1	1
Group 02	Frame, Beam and Basket Assemblies	2-1	2
Group 03	Panel, Sound Deadening, and Lower Track Assemblies	3-1	3
Group 04	Platform Assembly	4-1	4
Group 05	Washer Intake Plumbing	5-1	5
	Washer Drain Pipe Assembly	6-1	6
	Washer Machine Assembly	7-1	7
	Washer Machine Interlock Safety Switch	8-1	8
	Washer Door Assembly	9-1	9
	Washer Drive-belt Assembly	10-1	10
	Washer Drive Motor	11-1	11
	Washer Air Tank Assembly	12-1	12
	Washer Gear Reducer Assembly	13-1	13

TABLE OF CONTENTS

		Page	Illus/ Figure
Group 05	(CONT.)		
	Washer Controller Air Manifold and Hose Assembly	14-1	14
	Washer Cylinder and Frame Assembly	15-1	15
	Washer Controller Air System	16-1	16
	Washer Controller Control Panel	17-1	17
	Washer Controller Chassis Assembly	18-1	18
	Washer Controller Stand	19-1	19
	Conduit Assembly	20-1	20
Group 06	Power Distribution Panel	21-1	21
Group 07	Air Compressor Assembly	22-1	22
Group 08	Bin Assembly Pre-Extraction	23-1	23
Group 09	Extractor Assembly	24-1	24
	Extractor Lid Assembly	25-1	25
	Extractor Curb and Basket Assembly	26-1	26
	Extractor Control Box Assembly	27-1	27
	Extractor Starter Box	28-1	28
	Extractor Trunnion Assembly	29-1	29
Group 09	Extractor Brake Shoe	30-1	30
	Extractor Dnve Unit	31-1	31
	Extractor Drain Pipe Assembly	32-1	32
Group 10	Modified Water Heater and Mounting Assembly	33-1	33
	Water Heater Manifold Assembly	34-1	34
	Water Heater Assembly	35-1	35
	Water Heater Swing Check and Drain Valves	36-1	36
	Water Heater Electrical Control Assembly	37-1	37
	Water Heater Fuel Control Assembly	38-1	38
	Water Heater Power Transformer	39-1	39

TABLE OF CONTENTS

		Page	Illus/ Figure
Group 10	(CONT.)		
	Water Heater Operating Limit and High-Limit Controls	40-1	40
	Water Heater Pressure Relief Valve and Thermostat Assembly	41-1	41
	Water Heater Fuel Filter Assembly	42-1	42
	Water Heater Blower and Motor Assembly	43-1	43
	Water Heater Fuel Pump Assembly	44-1	44
	Water Heater Burner Head and Nozzle Assembly	45-1	45
	Water Heater Skid and Handle Assembly	46-1	46
	Water Heater Drum Fill and Hose Assembly	47-1	47
Group 11	Dryer Tumbler Assembly	48-1	48
	Dryer Drum and Fill and Hose P Assembly	49-1	49
	Dryer Fuel Filter Assembly	50-1	50
	Dryer Combustion Blower and Motor Assembly	51-1	51
	Dryer Fuel Pump Assembly	52-1	52
	Dryer Burner Assembly	53-1	53
	Dryer Transformer and Solenoid	54-1	54
	Dryer Tumbler Drive Chain and Trunnion Assembly	55-1	55
	Dryer Tumbler Drive Motor and Gear Box Assembly	56-1	56
	Dryer Air Heater Assembly	57-1	57
	Dryer Cylinder Assembly	58-1	58
	Dryer Electrical Control and Base Assembly	59-1	59
	Dryer Exhaust Motor and Fan Assembly	60-1	60
	Dryer Spout and Duct	61-1	61
	Dryer Bin Assembly	62-1	62
Group 12	Water Pump and Tie-down Assembly	63-1	63
	Water Pump Strainer Assembly	64-1	64
	Water Pump Assembly	65-1	65

TABLE OF CONTENTS

		Page	Illus/ Figure
Group 12	(CONT)		
	Water Pump Motor	66-1	66
Group 13	Water Suction Strainer	67-1	67
	Water Hose Assemblies	68-1	68
Group 14	Exhaust Duct Assemblies	69-1	69
Group 15	Modified Generator and Tie-down Assembly	70-1	70
Group 16	Fire Extinguisher and Bracket Assembly	71-1	71
Group 17	Tool Box Assembly	72-1	72
Group 18	M13 Decontamination Apparatus Bracket	73-1	73
Group 19	Ground Rod Assembly	74-1	74
Group 20	Modified Trailer Assembly	75-1	75
Group 21	Bulk Items	Bulk-1	
Section III	Special Tools, List	(Not Applicable)	
Section IV	CROSS-REFERENCE INDEXES	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-4	
	Figure and Item Number Index	I-41	

UNIT, DIRECT SUPPORT
AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of unit, direct support, and general support maintenance of the Laundry Unit, Trailer Mounted, Model M85-100, NSN 3510-01-291-8169. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed In this section Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized **by** this RPSTL (as indicated by Basis of Issue (BOI) information In DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list In alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance The figure and Item number index lists figure and item number in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.
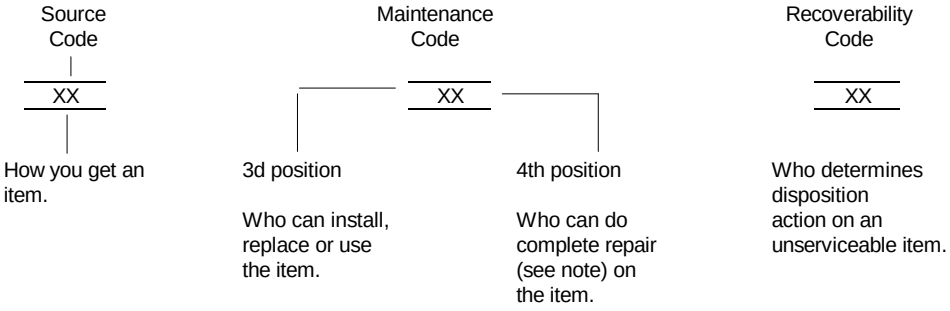
b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout