TECHNICAL MANUAL

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

PUMPING ASSEMBLY, WATER
600 GPM,
TRAILER MOUNTED

NSN 4320-01-314-8844
MODEL 6X6 SP6

Distribution Statement A: Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY
29 APRIL 1994

TECHNICAL MANUAL

NO. 10-4320-315-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 29 April 1994

TECHNICAL MANUAL

Unit, Direct Support and General Support Maintenance Repair Parts and Special Tools List PUMPING ASSEMBLY, WATER 600 GPM, TRAILER MOUNTED NSN 4320-01-314-8844 MODEL 6X6 SP6

Current as of 15 April 1994

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		PAGE	ILLUS/ FIGURE
Section I	Introduction	1	
Section II	Repair Parts List		
Group 00	Pumping Assembly 6X6 SP6		
Group 01	Noise Enclosure, Roof & Back Cover	1-1	
	Noise Enclosure Front Cover	2-1	
	Noise Enclosure Left Side Panel	3-1	
	Noise Enclosure Right Side Panel	4-1	
	Noise Enclosure Frame	5-1	
Group 02	Battery Assembly	6-1	
	Control Panel Assembly	7-1	
Group 03	Engine Accessories	8-1	
	Fuel Fill and Air Cleaner	9-1	
Group 04	Engine Assembly	10-1	
	Oil Line and Cartridge	11-1	
	Oil Breather Assembly	12-1	
	Fuel Injection Lines	13-1	
	Fuel Injector and Pump	14-1	
	Alternator	15-1	
	Starter Assembly	16-1	
	Turbocharger Assembly and Air Discharge Assembly	17-1	
	Intake and Exhaust Manifold	18-1	

TABLE OF CONTENTS - CONTINUED

		PAGE	ILLUS/ FIGURE
Group 04 Cont.	Air Cowling Base Assembly	19-1	
	Flywheel Assembly	20-1	
	Cylinder Head Assembly	21-1	
	Cylinder and Piston	22-1	
	Oil Pan Assembly and Suction Tube Assembly	23-1	
	Connecting Rod Assembly	24-1	
	Front Cover Assembly	25-1	
	Oil Pump Assembly and Oil Pump Discharge Pipe	26-1	
	Crankcase Assembly and Crankshaft Assembly	27-1	
Group 05	Pump Assembly	28-1	
Group 06	Trailer Assembly	29-1	
	Tail Light, Wiring Harness, and Jack Assembly	30-1	
	Reflector Axle Assembly and Spring and Suspension Kit	31-1	
	Battery Box and Chassis	32-1	
Group 07	Bulk Materials List	BULK-1	
Section III.	Special Tools List (Not Applicable)		
Section IV.	Cross Reference Index		
	National Stock Number Index	I-1	
	Part Number Index	I-3	
	Figure and Item Number Index	I-20	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. Scope. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the pumping assembly. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance, and recoverability (SMR) codes.

2. General. In addition to Section I, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II - Repair Parts List A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits or sets are listed separately in their own functional group within Section II.

b. Section lll. Special Tools List - Not Applicable.

c. Section IV. Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listings, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGEC and part numbers.

3. Explanation of Columns (Section II).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout

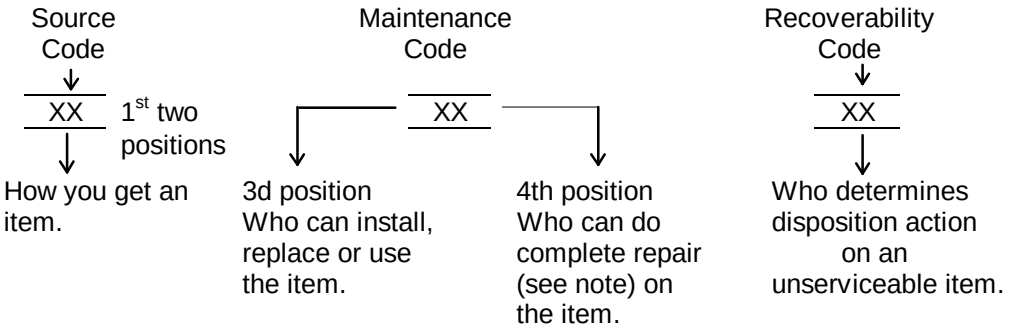

* Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the a Repair" function in a use/user environment in order to restore serviceability to a failed item.