TM 9-2330-371-14&P

TECHNICAL MANUAL

OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE (INCLUDING REPAIR PARTS AND SPECIAL TOOLS LISTS)

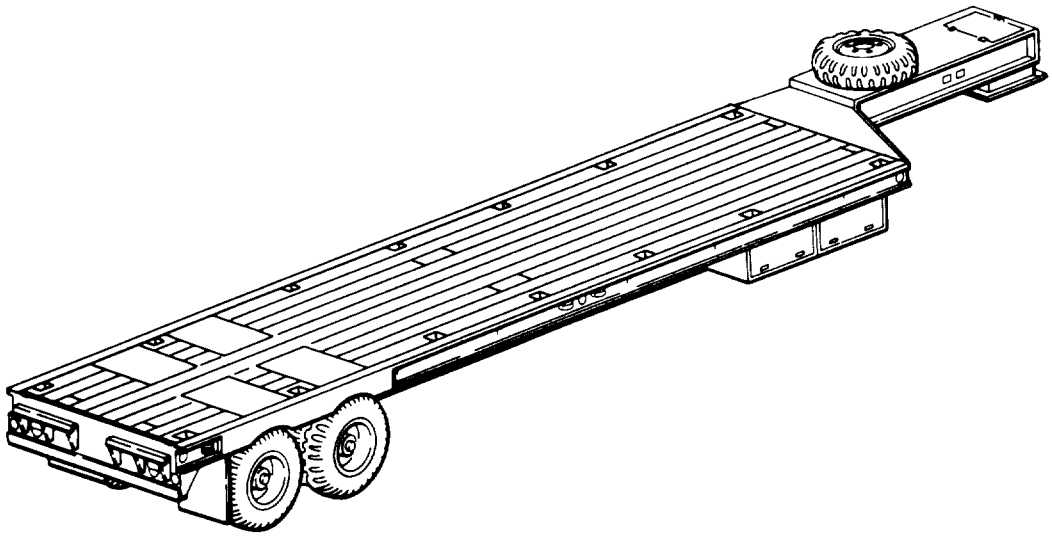

INTRODUCTION PAGE 1-1

OPERATING INSTRUCTIONS PAGE 2-1

OPERATOR MAINTENANCE PAGE 3-1

ORGANIZATIONAL MAINTENANCE PAGE 4-1

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE PAGE 5-1

MAINTENANCE ALLOCATION CHART PAGE B-1

REPAIR PARTS AND SPECIAL TOOLS LISTS PAGE F-1

SEMITRAILER, LOWBED: 12-TON, M270A1 (NSN 2330-00-289-7515)

HEADQUARTERS, DEPARTMENT OF THE ARMY

DECEMBER 1984

TECHNICAL MANUAL

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC *17 December 1984*

NO. 9-2330-371-14&P

Operator's, OrganizationaL, Direct Support, and GeneraL Support Maintenance ManuaL
(INCLUDING REPAIR PARTS AND SPECLAL TOOLS LISTS)

SEMITRAILER, LOWBED:
12-TON, M270A1
(NSN 2330-00-289-7515)

Current as of 14 June 1984

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Tank-Automotive Command, ATTN:AMSTA-MB, Warren, Ml 48090. A reply will be sent to you.

TABLE OF CONTENTS

		Page
CHAPTER 1	INTRODUCTION	1-1
Section i.	General information	1-1
Section II.	Equipment Description and Data	1-3
Section Iii.	Principles of Operation	1-9
CHAPTER 2	OPERATING INSTRUCTIONS	2-1
Section 1.	Description and Use of Operator's Controls	2-1
Section II.	Operator/Crew Preventive Maintenance Checks and Services (PMCS)	2-5
Section Iii.	Operation Under Usual Conditions	2-13
Section IV.	Operation Under Unusual Conditions	2-23
CHAPTER 3	OPERATOR MAINTENANCE	3-1
Section I.	Lubrication instructions	3-1
Section II.	Operator Troubleshooting Procedures	3-1
Section III.	Operator Maintenance Procedures	3-6

* This manual supersedes part of TM 9-8240, as pertains to the M270A1 semitrailer, 23 August 1957, including all changes; part of TM 9-2330-220-24P, 20 August 1973.

TABLE OF CONTENTS – CONTINUED

		Page
CHAPTER 4	**ORGANIZATIONAL MAINTENANCE**	4-1
Section I.	General Maintenance Instructions	4-1
Section II.	Lubrication Instructions	4-5
Section III.	Repair Parts, Special Tools; Test, Measurement, and Diagnostic Equipment (TMDE); and Support Equipment	4-8
Section IV.	Service Upon Receipt	4-8
Section V.	Organizational Preventive Maintenance Checks and Services (PMCS)	4-9
Section VI.	Organizational Troubleshooting Procedures	4-17
Section VII.	Electrical System Maintenance	4-25
Section VIII.	Brake System Maintenance	4-63
Section IX.	Wheel, Hub, and Drum Maintenance	4-113
Section X.	Tire and Tube Maintenance	4-118
Section XI.	Frame and Towing Attachments Maintenance	4-118
Section XII.	Body Maintenance	4-129
Section XIII.	Accessory Item Maintenance	4-140
Section XIV.	Preparation for Storage or Shipment	4-144
CHAPTER 5	**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE**	5-1
Section I.	Repair Parts, Special Tools; Test, Measurement, and Diagnostic Equipment (TMDE); and Support Equipment	5-1
Section II.	Axle Maintenance	5-2
Section III.	Brake Maintenance	5-13
Section IV.	Wheel Maintenance	5-16
Section V.	Frame and Towing Attachments Maintenance	5-19
Section VI.	Spring Maintenance	5-24
Section VII.	Deck Maintenance	5-45
APPENDIX A	REFERENCES	A-1
APPENDIX B	**MAINTENANCE ALLOCATION CHART**	B-1
Section 1.	Introduction	B-1
Section II.	Maintenance Allocation Chart	B-4
Section III.	Tools and Test Equipment Requirements	B-6
Section IV.	Remarks	B-6
APPENDIX C	COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LISTS	C-1
Section I.	Introduction	C-1
Section II.	Components of End Item List	C-2
Section III.	Basic Issue Items	C-2

TABLE OF CONTENTS - CONTINUED

		Page	Illus Fig
APPENDIX D	**ADDITIONAL AUTHORIZATION LIST**	D-1	
SECTION I	INTRODUCTION	D-1	
SECTION II	ADDITIONAL AUTHORIZATION LIST	D-1	
APPENDIX E	**EXPENDABLE SUPPLIES AND MATERIALS LIST**	E-1	
SECTION I	INTRODUCTION	E-1	
SECTION II	EXPENDABLE SUPPLIES AND MATERIALS LIST	E-2	
APPENDIX F	**REPAIR PARTS AND SPECIAL TOOLS LIST**	F-1	
SECTION I	INTRODUCTION	F-1	
SECTION II	REPAIR PARTS LIST	1-1	
GROUP 06	ELECTRICAL SYSTEM		
	0609 -LIGHTS,	...1-1	
	COMPOSITE LIGHT	...1-1	1
	CLEARANCE MARKER LIGHT	...2-1	2
	0613-CHASSIS WIRING HARNESS.	...3-1	
	WIRING HARNESS	3-1	3
	WIRING HARNESS ADAPTER	...4-1	4
	LEAD ASSEMBLY	5-1	5
GROUP 11	REAR AXLE		
	1100-REAR AXLE ASSEMBLY	..6-1	
	AXLE ASSEMBLY	6-1	6
	AXLE ASSEMBLY (USE ON USA PAO1UX THRU PAO21W) ...	7-1	7
	AXLE TRUNNION.	...8-1	8
GROUP 12	BRAKES		
	1202-SERVICE BRAKES	...9-1	
	SERVICE BRAKES	9-1	9
	SERVICE BRAKES (USE ON USA PAO1UX THRU PAO21W)	...10-1	10
	1204-HYDRAULIC BRAKE SYSTEM	...11-1	
	WHEEL CYLINDER	11-1	11
	MASTER CYLINDER	...12-1	12
	BRAKE LINES AND FITTINGS	13-1	13
	1206-MECHANICAL BRAKE SYSTEM	...14-1	
	SLACK ADJUSTER (USE ON USA PAO1UX THRU PAO21W)	...14-1	14
	1208-AIR BRAKE SYSTEM	...15-1	
	AIR RESERVOIR	...15-1	15
	BRAKE SYSTEM (USE ON USA PAO1UX THRU PAO21W) .	16-1	16
	AIR CHAMBER	17-1	17

TABLE OF CONTENTS – CONTINUED

		Page	Illus Fig
	AIR BRAKE CHAMBER (USE ON USA PAO1UX THRU PAO21W)	18-1	18
	AIR BRAKE LINES AND FITTINGS	19-1	19
	1211-TRAILER BRAKE CONNECTION AND CONTROLS	20-1	
	AIR BRAKE COUPLINGS	20-1	20
GROUP 13	WHEELS AND TRACKS		
	1311 -WHEEL ASSEMBLY	21-1	
	HUB AND DRUM ASSEMBLY	21-1	21
	HUB AND BRAKE DRUM (USE ON USA PAO1UX THRU PAO21W)	22-1	22
	WHEELS	23-1	23
	1313 -TIRES AN D TUBES	24-1	
	TIRES AND TUBES	24-1	24
GROUP 15	FRAME AND TOWING ATTACHMENTS		
	1501 -FRAME ASSEMBLY	25-1	
	FRAME	25-1	25
	BOGIE BRACKET	26-1	26
	1506-FIFTH WHEEL	27-1	
	KING PIN	27-1	27
	1507-LANDING GEAR AND LEVELING JACKS	28-1	
	LANDING GEAR	28-1	28
GROUP 16	SPRINGS		
	1601-SPRINGS	29-1	
	SPRING ASSEMBLY	29-1	29
	SPRINGS (USE ON USA PAO1UX THRU PAO21W)	30-I	30
	1605-TORQUE RODS	31-1	
	TORQUE RODS	31-1	31
GROUP 18	BODY		
	1801 -BODY ASSEMBLIES	32-1	
	SPLASH GUARDS	32-1	32
	SPLASH SHIELD	33-1	33
	1808-STOWAGE BOXES	34-1	
	TOP COVER ASSEMBLY	34-1	34
	STOWAGE BOX ASSEMBLY	35-1	35
	1810-CARGO BODY	36-1	
	PLANKING	36-1	36
GROUP 22	BODY ACCESSORY ITEMS		
	2202-ACCESSORY ITEMS	37-1	
	REFLECTORS	37-1	37
	2210-DATA PLATES AND INSTRUCTION HOLDERS	38-1	
	DATA AND INSTRUCTION PLATES	38-1	38
GROUP 94	REPAIR KITS		
	9401 -REPAIR KITS	KIT-1	
	KITS	KIT-1	KIT

TABLE OF CONTENTS – CONTINUED

		Page	Illus Fig
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501 -BULK MATERIEL	BULK-1	
	BULK	BULK-1	BULK
SECTION III	SPECIAL TOOLS LIST (NOT APPLICABLE)		
SECTION IV	CROSS-REFERENCE INDEXES	I-1	
	NATIONAL STOCK NUMBER INDEX	I-1	
	PART NUMBER INDEX	I-6	
	FIGURE AND ITEM NUMBER INDEX	I-15	
APPENDIX G	ILLUSTRATED LIST OF MANUFACTURED ITEMS	G-1	
SECTION I	INTRODUCTION	G-1	
SECTION II	MANUFACTURED ITEMS ILLUSTRATIONS	G-1	
APPENDIX H	TORQUE LIMITS	H-1	
INDEX		INDEX 1	
ELECTRICAL SCHEMATIC		FO-1	

CHAPTER 1

INTRODUCTION

OVERVIEW

The purpose of this chapter is to acquaint you with the M270A1 semitrailer equipment, size, shape, and how the semitrailer systems work.

		Page
Section I.	General Information	1-1
Section II.	Equipment Description and Data	1-3
Section III.	Principles of Operation	1-9

Section I. GENERAL INFORMATION

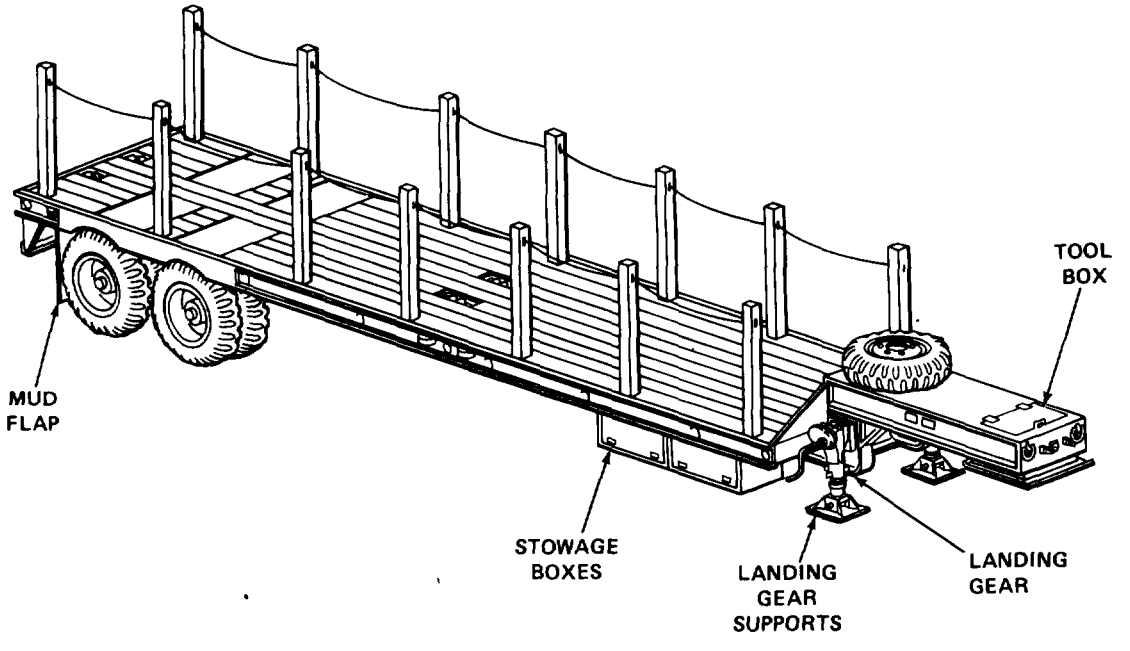

	Page
Destruction of Army Materiel To Prevent Enemy Use	1-2
Maintenance Forms and Records	1-2
Scope	1-2
Preparation for Storage or Shipment	1-2
Reporting Equipment Improvement Recommendations (EIR's)	1-2

TA224174

SCOPE

Type of Manual: Operator's, Organizational, Direct Support, and General Support Maintenance (Including Repair Parts and Special Tools Lists).

Model Number and Equipment Name: M270A1 12-Ton Lowbed Semitrailer.

Purpose of Equipment: Transport new or salvaged aircraft and general purpose hauling.

MAINTENANCE FORMS AND RECORDS

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA PAM 738-750, The Army Maintenance Management System (TAMMS).

DESTRUCTION OF ARMY MATERIEL TO PREVENT ENEMY USE

Refer to TM 750-244-6, Procedures for Destruction of Tank-Automotive Equipment to Prevent Enemy Use (US Army Tank-Automotive Command).

PREPARATION FOR STORAGE OR SHIPMENT

Requirements for packaging and administrative storage are contained in chapter 4.

REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIR'S)

If your semitrailer needs improvement, let us know. Send us an EIR. You the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design. Put it on an SF 368 (Quality Deficiency Report). Mail it to: Commander, US Army Tank-Automotive Command, Attn: DRSTA-MP, WARREN, MI 48090. We will send you a reply.