TECHNICAL MANUAL

UNIT AND DIRECT SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

TACTICAL WATER DISTRIBUTION SYSTEM MODEL TWDS-20

NSN 4320-01-361-9232

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY
30 DECEMBER 1993

TECHNICAL MANUAL

NO.10-4320-345-23P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON D.C., 30December1993

TECHNICAL MANUAL
Unit, Direct Support and General Support Maintenance
Repair Parts and Special Tools List

Current as of 1 December 1993

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		PAGE	ILLUS/ FIGURE
Section I.	Introduction	1	
Section II.	Repair Part	1-1	
Group 00	Tactical Water Distribution System	1-1	1
Group 01	Distribution Point	2-1	2
	Valve Assembly, Elbow	3-1	3
	Discharge Hose Assembly, 2 Inch by 20 Feet	4-1	4
	Wye, Quick Disconnect	5-1	5
	Valve Assembly, Gate	6-1	6
	Reducer, Quick Disconnect	7-1	7
	Nozzle Assembly, Distribution	8-1	8
	Meter Assembly, Fluid Flow Indicating	9-1	9
	Purification Assembly	10-1	10
	Discharge Hose Assembly, 2 Inch by 10 Feet	11-1	11
	Coupling Half, Quick Disconnect	12-1	12
	Suction Hose Assembly, 2 Inch by 20 Feet	13-1	13
	Quick Disconnect Coupling and Water Bag	14-1	14
	Fuel Stand Assembly	15-1	15
Group 02	Storage Assembly	16-1	16
	Discharge Hose Assembly, 4 Inch by 10 Feet	17-1	17
	Gate Valve Assembly, 4 Inch	18-1	18
	Coupling Assembly, Clamp	19-1	19
	Reducing Tee, Clamping Tool	20-1	20
	Fabric Tank Assembly	21-1	21
Group 03	Suspension Assembly	22-1	22
	Rope, Clamp, Saddle, Turn Buckle, and Stake Guide	23-1	23
Group 04	Sling Assembly	24-1	24

		PAGE	ILLUS/ FIGURE
Group 05	Flaking Box Assembly .	25-1	25
Group 06	Pressure Relief Valve	26-1	26
Group 07	Press Regulating Valve, Skid Mounted	27-1	27
Group 08	Suction Hose Assembly, 6 Inch by 10 Feet	28-1	28
Group 09	Y-Connector	29-1	29
Group 1 0	Pumping Station .	30-1	30
Group 11	Tricon	31-1	31
Group 12	Accessories	32-1	32
	Hoseline Displacement and Evacuation Kit .	33-1	33
	Hoseline Packing Kit	34-1	34
	Hoseline Repair Kit	35-1	35
	Tactical Water Miscellaneous Items	36-1	36
	Water Tank Chest	37-1	37
Group 13	Bulk Items	BULK-1	
Section III.	Special Tools List	38-1	38
Section IV.	Cross Reference Index		
	National Stock Number Index	I-1	
	Part Number Index	I-3	
	Figure and Item Number Index	I-14	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support and general support maintenance of the Air Conditioner. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in functional groups in Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown in the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-Reference Index. A list, in National Item Identification Number (NIIN) sequence, of all national stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

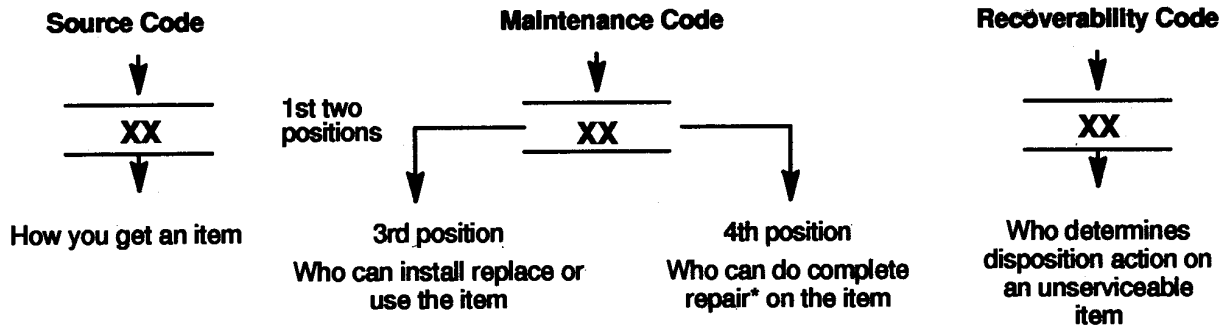

* Complete Rear: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.