

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS)**

**BITUMINOUS DISTRIBUTOR BODY
M918 (MODEL D-63)
NSN 3895-01-028-4390**

*** This technical manual supercedes
Appendix C, Repair Parts and Special
Tools Lists (RPSTL) of TM 5-3895-371-24&P
dated 1 March 1981 only.**

Approved for public release: distribution is unlimited

HEADQUARTERS, DEPARTMENT OF THE ARMY

DECEMBER 1992

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS)
BITUMINOUS DISTRIBUTOR BODY
M918 (MODEL D-63)
NSN 3895-01-028-4390

Current as of 26 June 1992

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (*Recommended Changes to Publications and Blank Forms*), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

*This technical manual supercedes Appendix C, Repair Parts and Special Tools Lists (RPSTL) of TM 5-3895-371-24&P dated 1 March 1981 only.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I. INTRODUCTION	1	
SECTION II. REPAIR PARTS LIST	1-1	
GROUP 06 ELECTRICAL SYSTEM		
0609 - LIGHTS	1-1	
LAMPS	1-1	1
0613 - HULL OR CHASSIS WIRING HARNESS	2-1	
ASPHALT TANK WIRING LOOM	2-1	2
ASPHALT TANK WIRING LOOM	3-1	3
GROUP 15 FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
1501 - FRAME ASSEMBLY	4-1	
LOOM BUMPER	4-1	4
STORAGE BOX	5-1	5
TUC-BAR SUBFRAME	6-1	6
GROUP 22 BODY, CHASSIS, AND HULL ACCESSORY ITEMS		
2202 - ACCESSORY ITEMS	7-1	
MISCELLANEOUS ACCESSORY ITEMS, THERMOMETER CAR SPLASHGUARD, AND FENDERS	7-1	7

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
2202 - ACCESSORY ITEMS (CON'T)		
MISCELLANEOUS ACCESSORY ITEMS, FENDER BRACKET, AND LEFT SIDE CATWALK	8-1	8
MISCELLANEOUS ACCESSORY ITEMS, REAR MOUNTING HARDWARE	9-1	9
MISCELLANEOUS ACCESSORY ITEMS, RIGHT SIDE BRACKETS AND MOUNTING HARDWARE	10-1	10
ASPHALT HOSES AND CONNECTORS	11-1	11
HAND SPRAY GUN	12-1	12
2210 - DATA PLATES AND INSTRUCTION HOLDERS	13-1	13
DATA PLATES	13-1	13
 GROUP 24 HYDRAULIC AND FLUID SYSTEMS		
2401 - PUMP AND MOTOR	14-1	
HYDRAULIC PUMP	14-1	14
HYDRAULIC PUMP ACTUATOR ASSEMBLY	15-1	15
HYDRAULIC PUMP MOUNTING HARDWARE	16-1	16
HYDRAULIC MOTOR	17-1	17
HYDRAULIC MOTOR MOUNTING HARDWARE	18-1	18
HYDRAULIC PUMP PROPELLER SHAFT	19-1	19
2403 - HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	20-1	
HYDRAULIC CONTROLS	20-1	20
2406 - STRAINERS, FILTERS, LINES, AND FITTINGS, ETC	21-1	
HYDRAULIC BLOWER MOTOR LINES AND FITTINGS	21-1	21
HYDRAULIC LINES AND FITTINGS	22-1	22
HYDRAULIC MOTOR LINES AND FITTINGS	23-1	23
HYDRAULIC RESERVOIR LINES AND FITTINGS	24-1	24
HYDRAULIC PUMP LINES AND FITTINGS	25-1	25
HYDRAULIC FILTER	26-1	26
2408 - LIQUID TANKS OR RESERVOIRS	27-1	
HYDRAULIC TANK AND RELATED PARTS	27-1	27
 GROUP 42 ELECTRICAL EQUIPMENT		
4202 - ELECTRICAL CONTROLS	28-1	
CAB ELECTRIC CONTROL BOX	28-1	28
 GROUP 43 GAS, AIR, AND VACUUM SYSTEMS		
4316 - ASSEMBLED HOSES, FITTINGS, LINES, BREATHERS, FILTERS, AND TRAPS	29-1	
AIR CONTROL BOX LINES AND FITTINGS	29-1	29
BITUMETER AIR LINES AND FITTINGS	30-1	30
SPRAY BAR AIR LINES AND FITTINGS	31-1	31
RESERVOIR AIR LINES AND FITTINGS, LEFT SIDE	32-1	32
RESERVOIR AIR LINES AND FITTINGS, RIGHT SIDE	33-1	33
4317 - MANIFOLD AND/OR CONTROL VALVES	34-1	
AIR CONTROL BOX	34-1	34
4318 - CYLINDER ASSEMBLIES	35-1	
SPRAY BAR SHIFTING AIR CYLINDER	35-1	35
SPRAY BAR TURN UP AND ON-OFF AIR CYLINDERS	36-1	36
BITUMETER AIR CHAMBER	37-1	37
4321 - TANKS OR RESERVOIRS	38-1	
AIR RESERVOIR	38-1	38

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
GROUP 47 GAGES (NONELECTRICAL), WEIGHING AND MEASURING DEVICES		
4701 - INSTRUMENTS	39-1	
PUMP AND DRIVE TACHOMETERS AND RELATED PARTS.....	39-1	39
DRIVE ASSEMBLY FOR TACHOMETERS	40-1	40
BITUMETER ASSEMBLY AND TIRE AND WHEEL ASSEMBLY.....	41-1	41
BITUMETER MOUNTING HARDWARE	42-1	42
REAR TANK GAGE.....	43-1	43
4702 - GAGES, MOUNTINGS, LINES, AND FITTINGS.....	44-1	
NONELECTRICAL GAGES.....	44-1	44
GROUP 55 PUMPS		
5500 - PUMP ASSEMBLY.....	45-1	
P-15 PUMP HOUSING.....	45-1	45
ASPHALT PUMP	46-1	46
5507 - PUMP DRIVE.....	47-1	
HYDRAULIC PUMP UNIVERSAL DRIVE	47-1	47
GROUP 60 STEAM BOILERS, WATER HEATERS, HEATING UNITS, BURNERS		
6004 - FUEL SYSTEM	48-1	
FUEL PUMP BURNER	48-1	48
6005 - BURNER ASSEMBLY.....	49-1	
PORTABLE BURNER.....	49-1	49
LOW PRESSURE BURNERS	50-1	50
6007 - FUEL TANK	51-1	
FUEL TANK, LINES, AND RELATED PARTS	51-1	51
FUEL RELIEF VALVE, STRAINER, AND RELATED PARTS.....	52-1	52
6010 - EXHAUST SYSTEM	53-1	
SMOKE STACKS.....	53-1	53
6011 - COMBUSTION CHAMBER.....	54-1	
LOW PRESSURE COMBUSTION CHAMBER	54-1	54
GROUP 73 CONCRETE AND ASPHALT EQUIPMENT COMPONENTS		
7300 - MAJOR ASSEMBLAGE		
BITUMINOUS BODY	55-1	55
7317 - MATERIAL SPRAY BAR.....	56-1	
SPRAY BAR ASSEMBLY.....	56-1	56
SPRAY BAR COMPONENTS	57-1	57
QUADRANT ASSEMBLY	58-1	58
7318 - TANKS, VALVES, FORMED HOSES, LINES, FITTINGS	59-1	
VACU-FLOW AND CONTROL INTAKE VALVES	59-1	59
TRANSFER, FILLING, AND DISTRIBUTING VALVES	60-1	60
ASPHALT TANK.....	61-1	61
MANHOLE ASSEMBLY.....	62-1	62
7322 - BLOWER ASSEMBLY	63-1	
BLOWER DRIVE MOTOR	63-1	63
BLOWER ASSEMBLY.....	64-1	64
GROUP 94 REPAIR KITS		
9401 - REPAIR KITS.....	KIT-1	
REPAIR KITS	KIT-1	KIT

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501 - BULK MATERIEL.....	BULK-1	
	BULK MATERIEL	BULK-1	BULK
SECTION III.	SPECIAL TOOLS (NOT APPLICABLE)		
SECTION IV.	CROSS-REFERENCE INDEXES		
	NATIONAL STOCK NUMBER INDEX.....	I-1	
	PART NUMBER INDEX.....	I-12	
	FIGURE AND ITEM NUMBER INDEX	I-44	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Bituminous Distributor Body. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance.

The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.


3. Explanation of Columns (Sections II and III).

- a. ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.
- b. SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

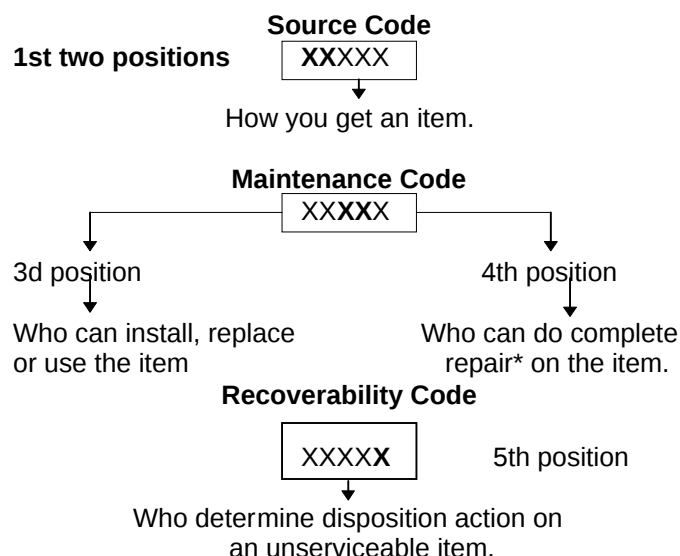

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

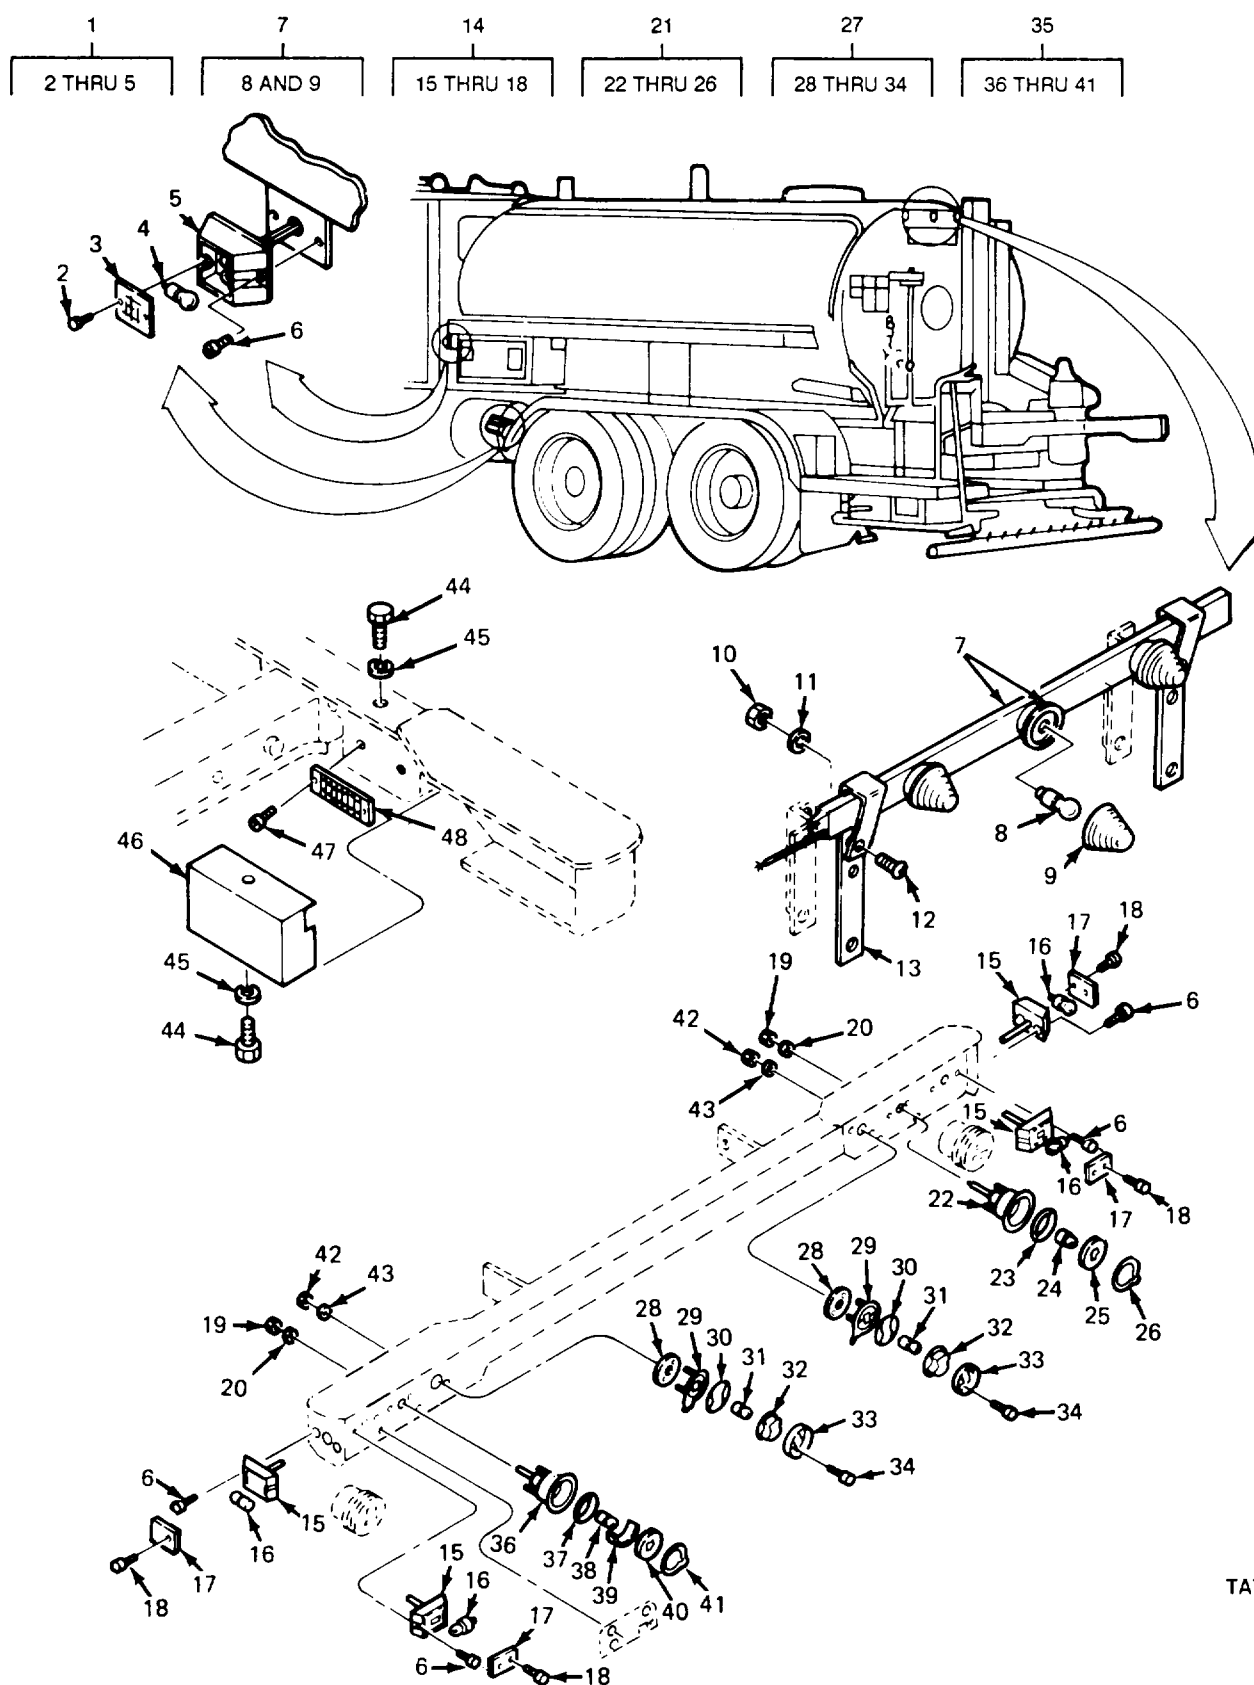

TA702219

FIGURE 1. LAMPS.

SECTION II

TM 5-3895-371-24P


(1)	(2)	(3)	(4)	(5)	(6)
ITEM NO	SMR CODE	CAGEC	PART NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
GROUP 06 ELECTRICAL SYSTEM					
GROUP 0609 LIGHTS					
FIG. 1 LAMPS					
* 1	XBOOO	12662	115A	LIGHT, MARKER, CLEARA CLEARANCE, AMBER	4
2	PAOZZ	12662	115-32	.SCREW.....	2
3	PAOZZ	12662	115-15A	LENS, LIGHT RED LENS FOR REAR- AMBER LENS FOR FRONT	1
* 4	PAOZZ	94988	1895	.LAMP, INCANDESCENT LIGHT	1
5	XAOZZ	12662	115-01	.HOUSING VENDOR WILL NOT SUPPLY.....	1
6	PAOZZ	24617	447835	SCREW LIGHT ASSY TO BUMPER AND BODY, TWO SCREWS PER LAMP-TOTAL RED AND AMBER LIGHTS IS 8	16
7	PBOOO	75175	503-2601	LIGHT ASSEMBLY, CLEA CLEARANCE.....	1
* 8	PAOZZ	80204	67	.LAMP, INCANDESCENT THREE LIGHTS ATTACHED TO LIGHT BAR....	3
9	PAOZZ	80195	6700041	.LENS, LIGHT BAR, THREE LIGHTS ATTACHED TO LIGHT BAR....	3
10	PAOZZ	96906	MS51967-2	NUT, PLAIN, HEXAGON STOP LIGHT TO BUMPER.....	2
11	PAOZZ	96906	MS35338-44	WASHER, LOCK 1/4 IN, STOP LIGHT TO	2
12	PAOZZ	96906	MS90728-8	BUMPER MTG.....	2
13	PAOZZ	80195	3390151	SCREW, CAP, HEXAGON H HEAD, LIGHT BAR TO TANK.....	2
14	PAOOO	80195	6700854	CLAMP, LIGHT CLUSTER LIGHT BAR TO	2
15	XAOZZ	12662	115-01	TANK.....	4
* 16	PAOZZ	94988	1895	LIGHT, MARKER, CLEARA LIGHTS..	1
* 17	PAOZZ	12662	55-15R	.HOUSING	1
18	PAOZZ	12662	115-32	.LAMP, INCANDESCENT	1
19	PAOZZ	96906	MS51967-2	.LENS, LIGHT RED LENS FOR REAR- AMBER LENS FOR FRONT	1
20	PAOZZ	96906	MS35338-44	.SCREW.....	2
21	PAOOO	72635	6-19780	NUT, PLAIN, HEXAGON	4
22	XDOZZ	81834	68110	WASHER, LOCK	4
23	PAOZZ	81834	51-9115-01	STOP LIGHT-TAILLIGHT TAIL AND TURN	1
* 24	PAOZZ	80204	1157	.PIGTAIL	1
25	PAOZZ	81834	90012	.GASKET.....	1
26	XDOZZ	81834	24-9905-03	.LAMP, INCANDESCENT	1
27	PAOOO	81834	62011	.LENS LIGHTS.....	1
28	XDOZZ	81834	51-9001-01	.SNAP RING	1
29	PFOZZ	81834	68080	LIGHT, BACKUP 12 VOLT	2
30	PAOZZ	81834	51-9142-01	.PAD, MOUNTING	1
31	PAOZZ	81348	W-L-00111/64	.LEAD, ELECTRICAL.....	1
32	PAOZZ	81834	90221	.GASKET LIGHTS.....	1
33	XDOZZ	81834	10-7005-02	.LAMP, INCANDESCENT	1
34	XDOZZ	81834	23-0118-19	.LENS, LIGHT LIGHTS	1
35	PAOOO	58499	2428W	.RIM, LENS LIGHTS	1
				.SCREW, LENS LENS TO HOUSING	2
				STOP LIGHT-TAILLIGH TAIL-TURN AND LICENSE, BUMPER ASSY-LOOM, TRUCK MTG.....	1

SECTION II

TM 5-3895-371-24P

(1)	(2)	(3)	(4)	(5)	(6)
ITEM NO	SMR CODE	CAGEC	PART NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
36	XDOZZ	81834	68110	.PIGTAIL	1
37	PAOZZ	81834	51-9115-01	.GASKET LIGHTS.....	1
38	PAOZZ	81343	1157	.LAMP, INCANDESCENT	1
39	XDOZZ	81834	90321	.LENS, LICENSE WINDOW LIGHTS	1
40	PAOZZ	81834	90012	.LENS.....	1
41	XDOZZ	81834	24-9905-03	.SNAP-RING, LENS RETAINER.....	1
42	PAOZZ	96906	MS35650-302	NUT, PLAIN, HEXAGON BACKUP LIGHT TO	2
				BUMPER	
43	PAOZZ	30379	120217	WASHER, LOCK BACKUP LIGHT TO	2
				BUMPER TRUCK MTG	
44	XDOZZ	80195	6000550	SCREW, SELF TAPPING LIGHTS.....	2
45	PAOZZ	96906	M535338-44	WASHER, LOCK 1/4 INCHTRUCK MTG	2
46	XDOZZ	80195	3370050	COVER TERMINAL STRIP.....	1
47	PAOZZ	96906	MS35206-246	SCREW, MACHINE	2
48	XDOZZ	80195	6700306	TERMINAL STRIP LIGHTS	1

END OF FIGURE

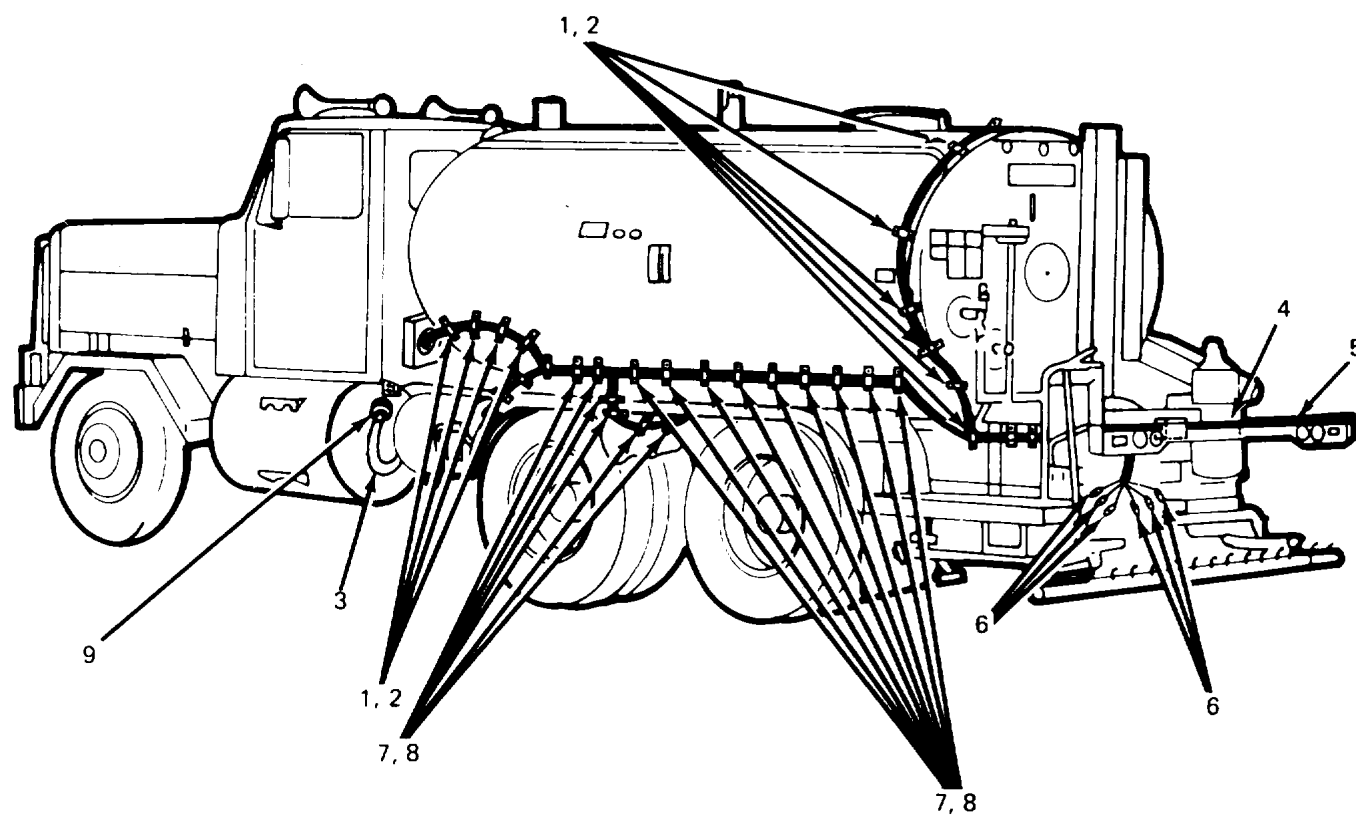


TA702220

FIGURE 2. ASPHALT TANK WIRING LOOM.

SECTION II

TM 5-3895-371-24P

(1)	(2)	(3)	(4)	(5)	(6)
ITEM NO	SMR CODE	CAGEC	PART NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
GROUP 0613 HULL OR CHASSIS WIRING HARNESS					
FIG. 2 ASPHALT TANK WIRING LOOM					
1	PAOZZ	75272	C0V-0517Z1	STRAP, RETAINING.....	16
2	PAOZZ	96906	MS51861-24	SCREW, TAPPING.....	28
3	PAOZZ	80195	J-626139	WIRING HARNESS	1
4	PAOZZ	80195	J-626137	WIRING HARNESS	1
5	PAOZZ	80195	J-626138	WIRING HARNESS	1
6	PAOZZ	96906	MS25036-154	TERMINAL, LUG.....	6
7	PAOZZ	75272	C0V-1313	CLAMP, LOOP.....	21
8	PAOZZ	89346	111633	SCREW, TAPPING.....	9
9	PBOZZ	96906	MS27142-3	CONNECTOR, PLUG, ELEC... ..	1

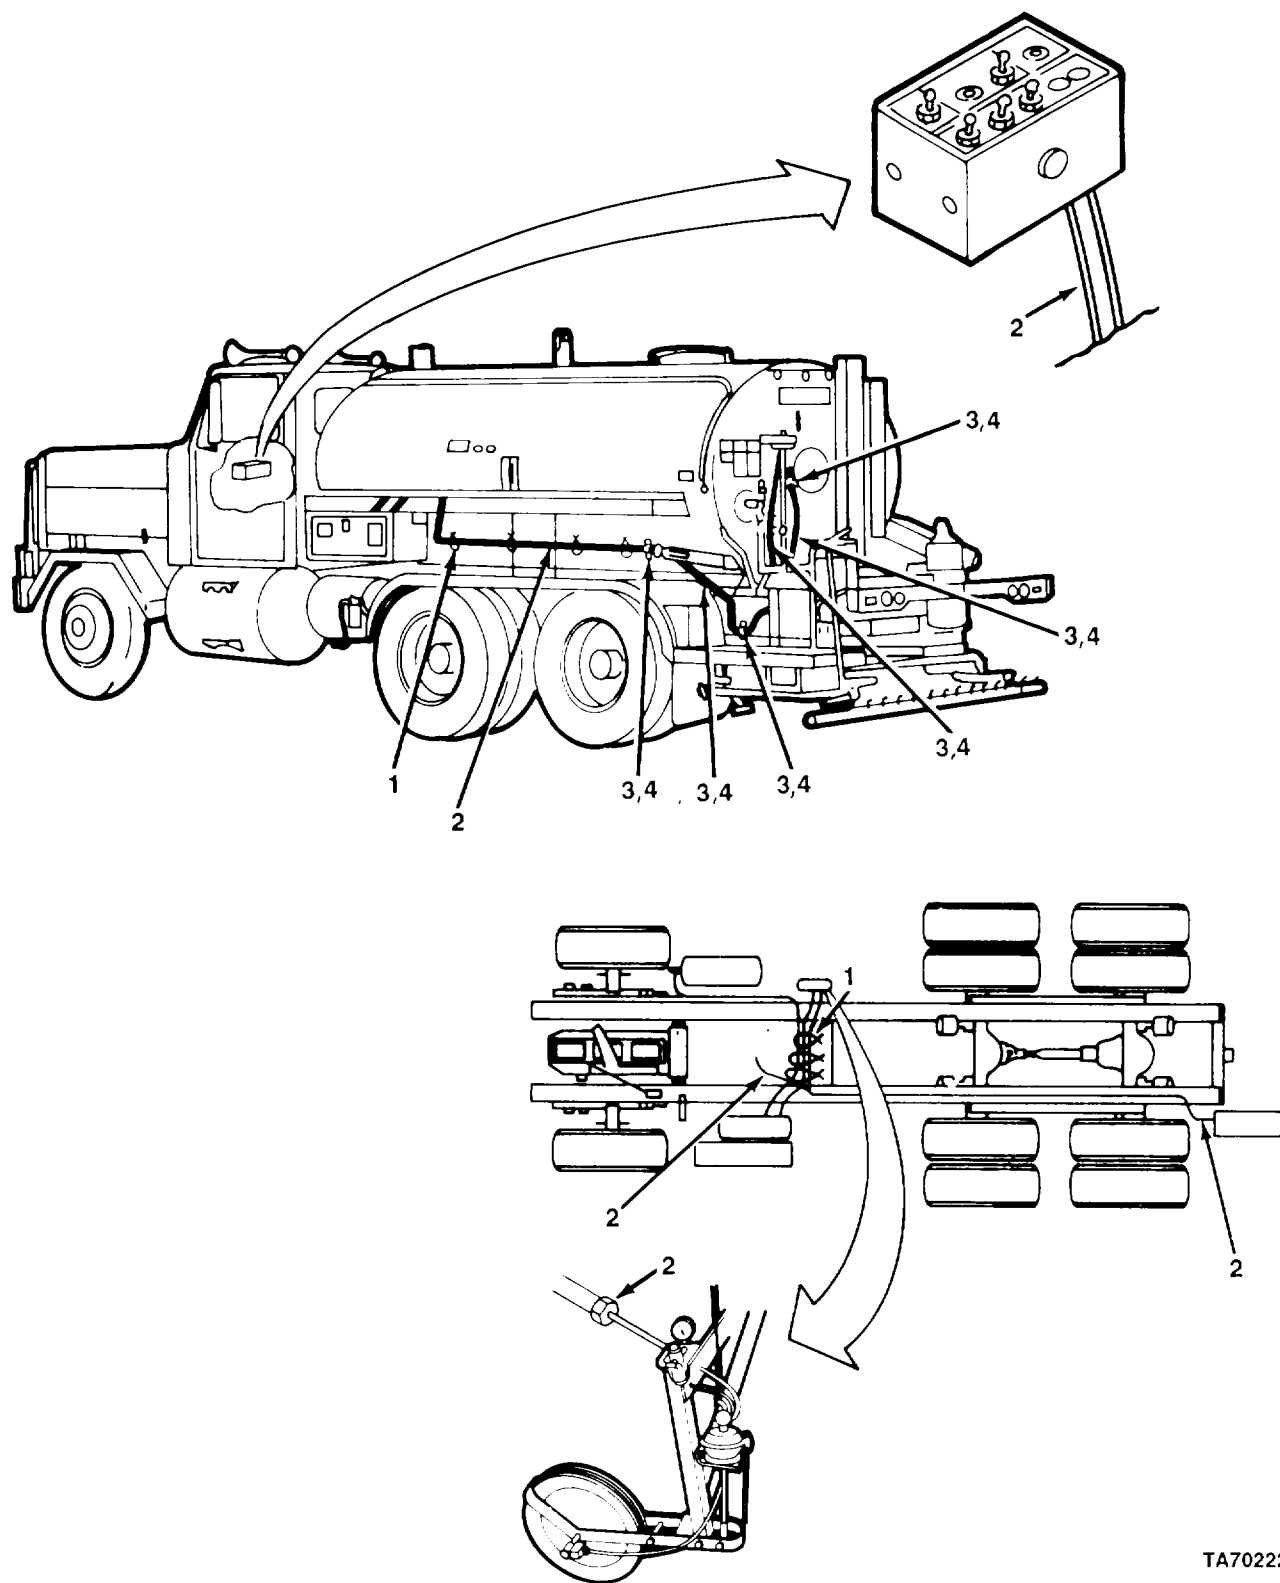

TA702221

FIGURE 3. ASPHALT TANK WIRING LOOM.


SECTION II

TM 5-3895-371-24P

(1)	(2)	(3)	(4)	(5)	(6)
ITEM NO	SMR CODE	CAGEC	PART NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
GROUP 0613 HULL OR CHASSIS WIRING HARNESS					
FIG. 3 ASPHALT TANK WIRING LOOM					
1	PAOZZ	96906	MS3367-2-9	STRAP, TIEDOWN, ELECT	9
2	PAOZZ	80195	3370087	WIRING HARNESS	1
3	PAOZZ	75272	C0V-0517Z1	STRAP, RETAINING.....	6
4	PAOZZ	96906	MS51861-24	SCREW, TAPPING.....	6

END OF FIGURE

3-1

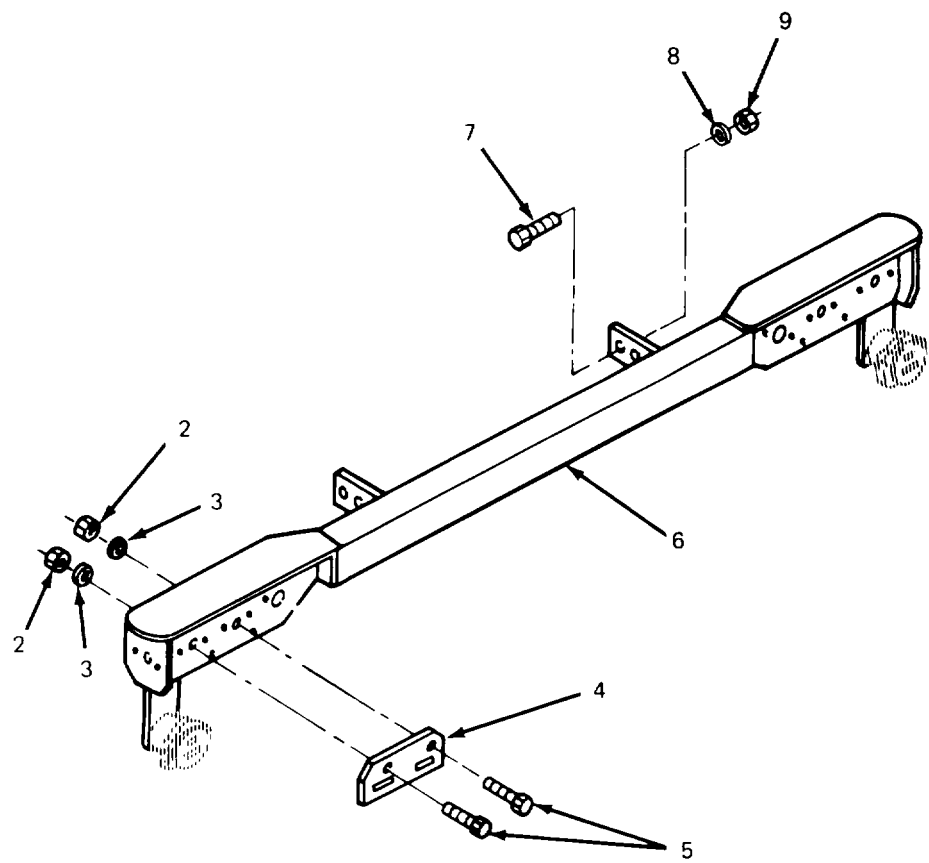

.A702222



FIGURE 4. LOOM BUMPER.

SECTION II

TM 5-3895-371-24P

(1)	(2)	(3)	(4)	(5)	(6)
ITEM NO	SMR CODE	FSCM	PART NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
GROUP 15 FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS					
GROUP 1501 FRAME ASSEMBLY					
FIG. 4 LOOM BUMPER					
1	XDOOO	80195	3310907	BUMPER ASSY-LOOM BUMPER ASSY-LOOM.....	1
2	PAOZZ	96906	MS51967-2	.NUT, PLAIN, HEXAGON BRACKET TO	2
3	PAOZZ	96906	MS35338-44	BUMPER, BUMPER ASSY-LOOM, TRUCK MTG.....	2
4	XDOZZ	80195	3310897	.WASHER, LOCK BRACKET TO BUMPER, BUMPER ASSY-LOOM, TRUCK MTG	1
5	PAOZZ	96906	MS90725-3	BRACKET BUMPER-LOOM ASSEMBLY.....	2
6	XDOZZ	80195	3310901	.SCREW, CAP, HEXAGON H BRACKET TO	2
7	PAOZZ	24617	122408	BUMPER.....	1
8	PAOZZ	96906	MS35338-48	.BUMPER, LOOM BUMPER ASSY-LOOM, TRUCK MTG	4
9	PAOZZ	96906	MS51967-14	SCREW, CAP, HEXAGON H ATTACH BUMPER TO FRAME MTG	4
				WASHER, LOCK ATTACH BUMPER TO FRAME	4
				NUT, PLAIN, HEXAGON ATTACH BUMPER TO	4
				FRAME ASSY	

END OF FIGURE

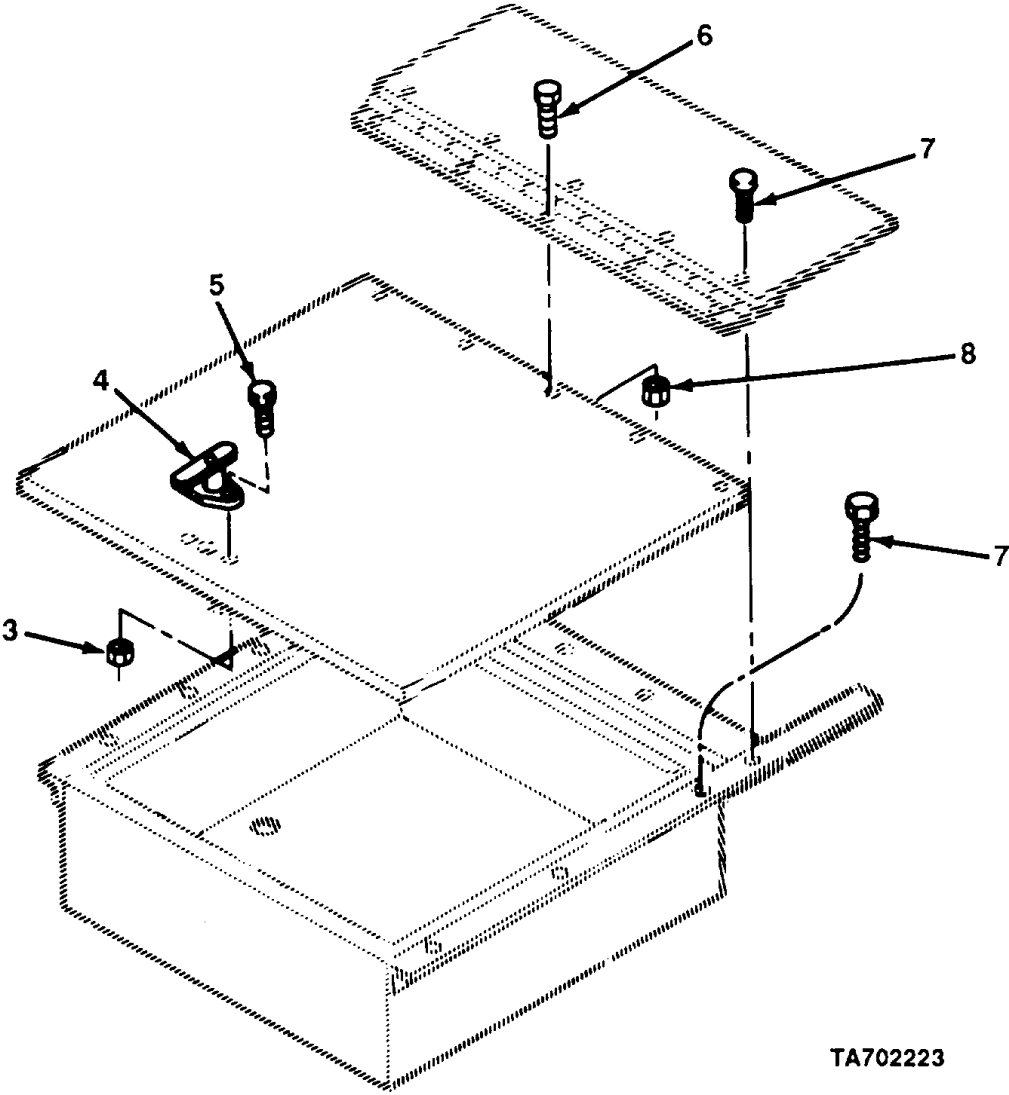

TA702223

FIGURE 5. STOWAGE BOX.

SECTION II

TM 5-3895-371-24P

(1)	(2)	(3)	(4)	(5)	(6)
ITEM NO	SMR CODE	FSCM	PART NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
GROUP 1501 FRAME ASSEMBLY					
FIG. 5 STOWAGE BOX					
1	XDOOO	80195	3320687	BOX, STOWAGE KEROSENE BATH SECTION,	1
2	XDOOO	80195	3320686	STOWAGE BOX-KEROSENE BATH SECTION	1
3	PAOZZ	24617	9413314	.LID ASSEMBLY STOWAGE BOX-KEROSENE..... BATH SECTION.....	2
4	PFOZZ	34623	MA14221026	..NUT, SELF-LOCKING, HE HANDLE TO.....	1
5	PAOZZ	96906	MS90725-6	LID ASSEMBLY, STOWAGE BOX KEROSENE BATH SECTIN	2
6	XDOZZ	24617	455523	..HANDLE, STOWAGE BOX	5
7	XDOZZ	80195	6000550	..SCREW, CAP, HEXAGON H HANDLE TO	22
8	PAOZZ	96906	MS35690-404	LID ASSY, STOWAGE BOX-KEROSENE BATH SECTION	5
				.BOLT	
				.SCREW, HEXAGON HEAD SELF TAPPING	
				STOWAGE BOX TO RAILS AND HINGE TO LID ASSEMBLY STOWAGE BOX-KEROSENE BATH SECTION.....	
				.NUT, PLAIN, HEXAGON	
END OF FIGURE					

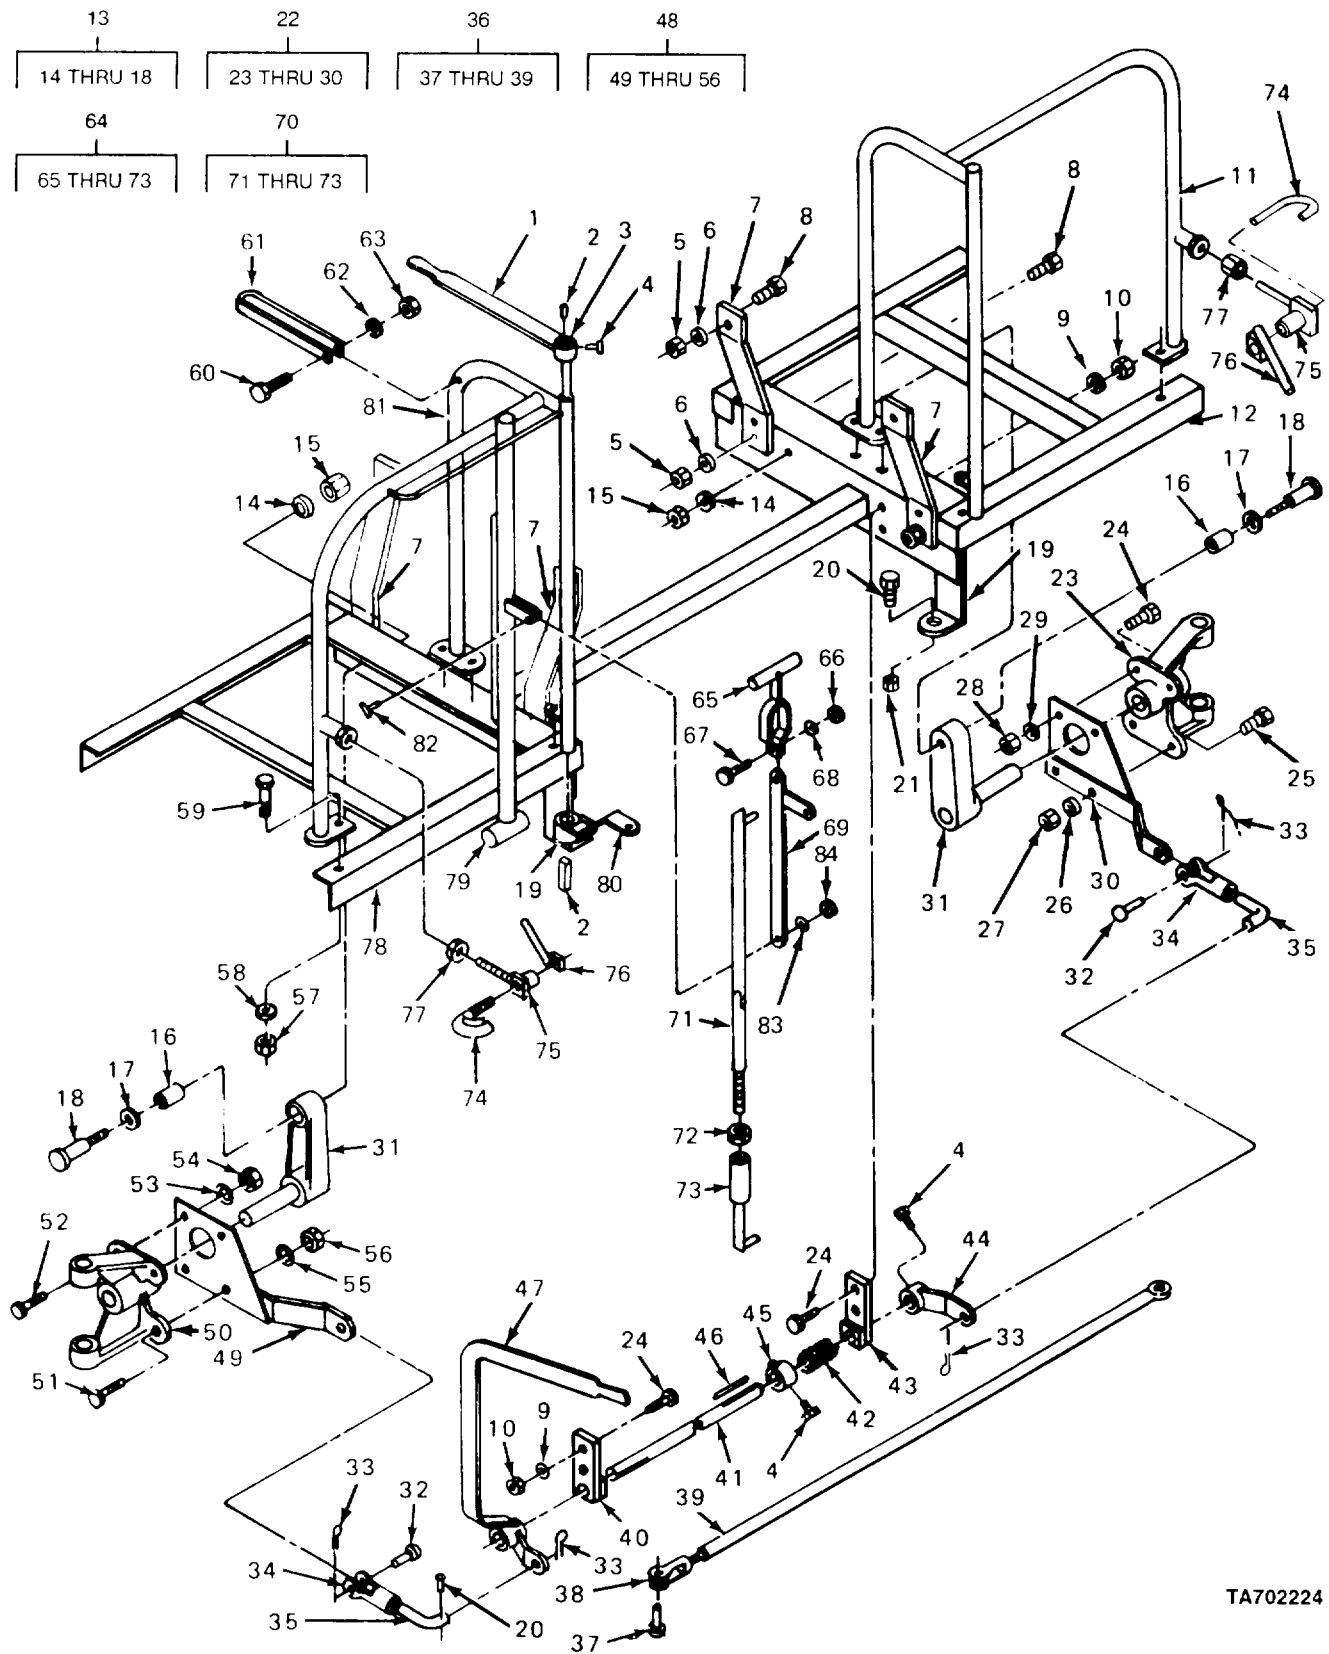


FIGURE 6. TUC-BAR SUBFRAME.

SECTION II

TM 5-3895-371-24P

(1)	(2)	(3)	(4)	(5)	(6)
ITEM NO	SMR CODE	CAGEC	PART NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
GROUP 1501 FRAME ASSEMBLY					
FIG. 6 TUC-BAR SUBFRAME					
1	XDFZZ	80195	3351059	LEVER ASSEMBLY SUBFRAME-TUC BAR.....	1
2	XDFZZ	80195	6000011	KEY, SPECIAL SUBFRAME-TUC BAR.....	2
3	XDFZZ	80195	3350272	SHAFT, SHIFTING SUBFRAME-TUC BAR	1
4	PAFZZ	96906	MS51977-77	SETSCREW SUBFRAME-TUC BAR..	3
5	PAFZZ	96906	MS51967-20	NUT, PLAIN, HEXAGON	4
6	PAFZZ	96906	MS35338-50	WASHER, LOCK	4
7	XDFZZ	80195	3310218	BRACKET, HANGER.....	4
8	PAFZZ	96906	MS90725-162	SCREW, CAP, HEXAGON H...	4
9	PAFZZ	96906	MS35338-48	WASHER, LOCK RIGHT YOKE TO RIGHT	2
				ARM ASSY, SUBFRAME-TUC BAR....	
10	PAFZZ	72582	120371	NUT RIGHT YOKE TO RIGHT ARM ASSY,	2
				SUBFRAME-TUC BAR	
11	XDFZZ	80195	3351257	RAIL, GUARD-RIGHT SUBFRAME-TUC BAR.....	1
12	XDFZZ	80195	3310359	PLATFORM WITH ANGLE UP-RIGHT,	1
				SUBFRAME-TUC BAR	
13	XDFZZ	80195	335053	BUSHING ASSEMBLY.....	2
14	PAFZZ	96906	MS35338-50	.WASHER, LOCK BAR CARRYING SHAFT	1
				ASSYS TO PLATFORM, SUBFRAME-TUC BAR	
15	PAFZZ	96906	MS51967-20	.NUT, PLAIN, HEXAGON BAR CARRYING.....	1
				SHAFT ASSYS TO PLATFORM, SUBFRAME-	
				TUC BAR	
16	PAFZZ	80195	3350055	.BUSHING BAR CARRYING SHAFT ASSYS.....	1
				TO PLATFORM, SUBFRAME-TUC BAR	
17	PAFZZ	96906	MS27183-22	.WASHER, FLAT BAR CARRYING SHAFT	1
				ASSYS TO PLATFORM, SUBFRAME TUC-BAR	
* 18	PAFZZ	80204	B1821BH063C400N	.SCREW, CAP, HEXAGON H BAR CARRYING	1
				SHAFT ASSYS TO PLATFORM, SUBFRAME	
				TUC-BAR	
19	PAFZZ	80195	3350901	BRACKET, ANGLE.....	2
20	PAFZZ	96906	MS51955-61	SETSCREW.....	2
21	PAFZZ	96906	MS51968-11	NUT, PLAIN, HEXAGON	2
* 22	PFFZZ	80195	CS9AR	YOKE SUBFRAME-TUC BAR	1
23	PAFZZ	80195	3350007	.YOKE, LEFT SUBFRAME-TUC BAR	1
24	PAFZZ	24617	122433	.SCREW, CAP, HEXAGON H RIGHT YOKE TO	4
				RIGHT ARM ASSY, SUBFRAME TUC-BAR	
25	PAFZZ	96906	MS90728-165	.SCREW, CAP, HEXAGON H LEFT YOKE TO	2
				LEFT ARM ASSY, SUBFRAME TUC-BAR.....	
26	PAFZZ	96906	MS35338-50	.WASHER, LOCK SUBFRAME-TUC BAR	2
27	PAFZZ	96906	MS51967-20	.NUT, PLAIN, HEXAGON LEFT YOKE TO	2
				LEFT ARM ASSY, SUBFRAME TUC-BAR.....	
28	PAFZZ	72582	120371	.NUT SUBFRAME TUC-BAR..	2
29	PAFZZ	96906	M535338-48	.WASHER, LOCK SUBFRAME TUC-BAR	
30	PAFZZ	80195	3350011	.ARM ASSEMBLY, RIGHT SUBFRAME-TUC	1
				BAR.....	
31	XDFZZ	80195	3350064	SHAFT ASSEMBLY BAR CARRYING,	2
				SUBFRAME-TUC BAR	
32	XDFZZ	80195	6000403	RIVET SHIFTING ROD ASSY TO	1
				SHIFTING ARM ASSY, SUBFRAME-TUC BAR.....	